




# Remove PowerMac G4 M5183 Main Fan

Written By: Justin Petrilli

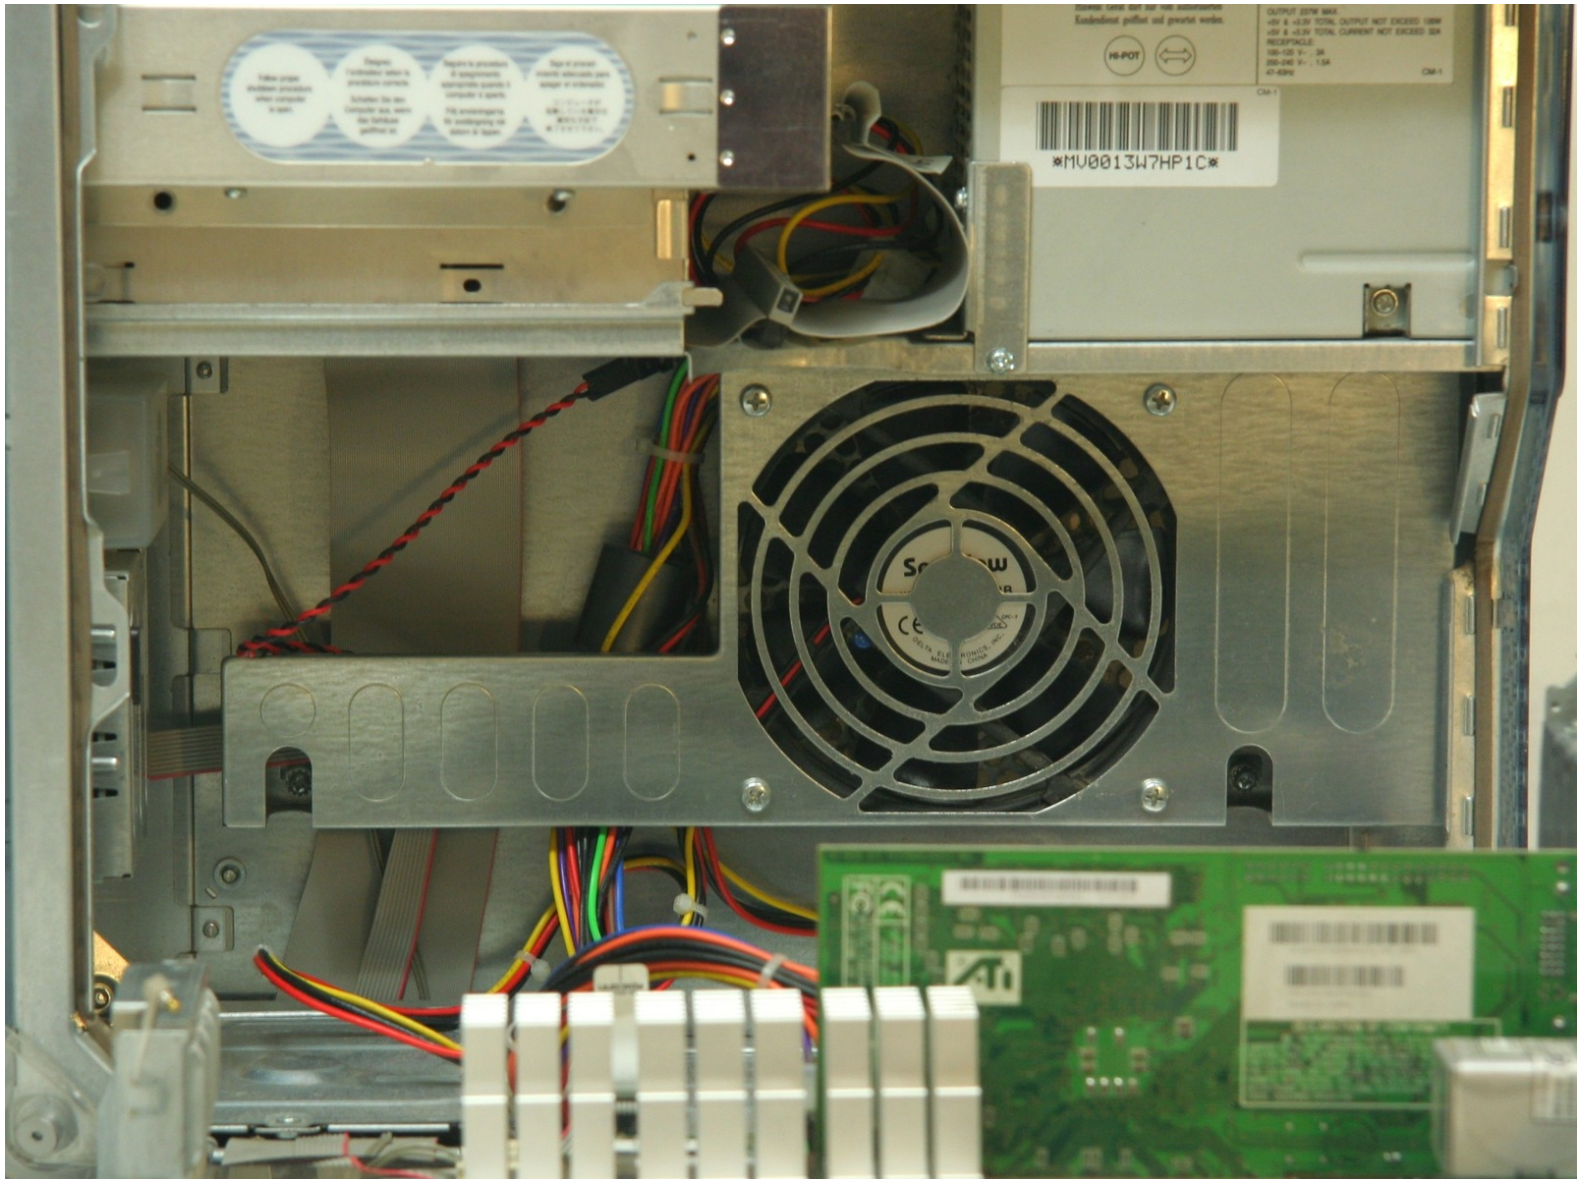

## INTRODUCTION

Remove the main fan from the case.

---




### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
  - [Phillips #2 Screwdriver](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Case





- Pull on outer latch.
- Lower door until it is level with your work surface.

 Before working on the computer make sure it is not plugged into a power supply, then touch a metal object. This discharges static electricity, which could damage the computer.




## Step 2 — Main Fan

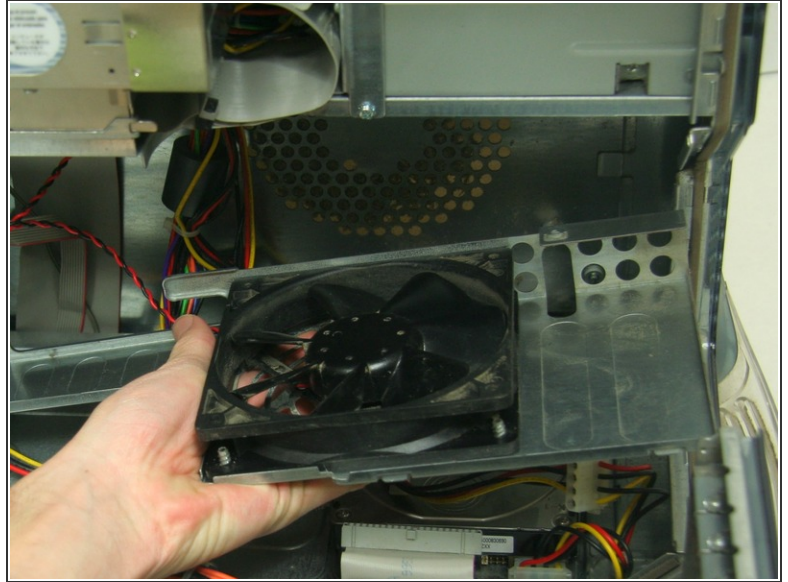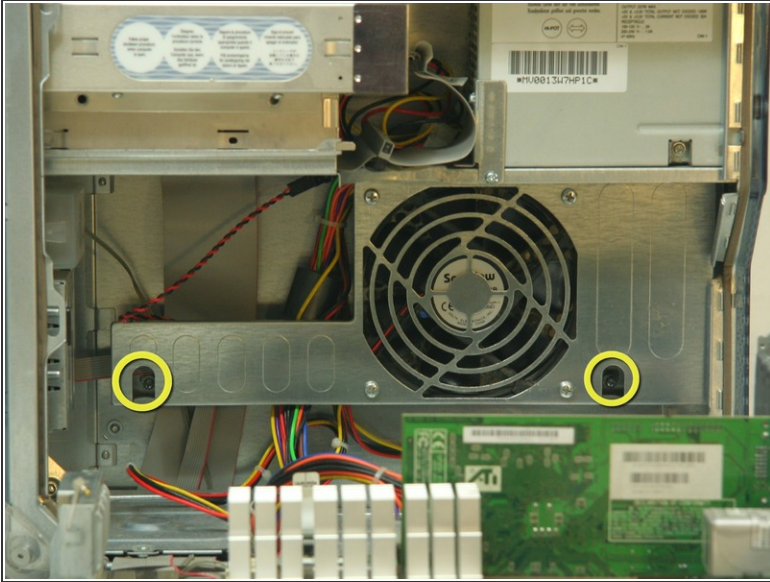

- Remove the screw from each of the two niches on lower part of fan using the Phillips #1 screwdriver.
- ⓘ The fan housing will still be connected to the computer by a power cable which will be removed in the next step.

## Step 3

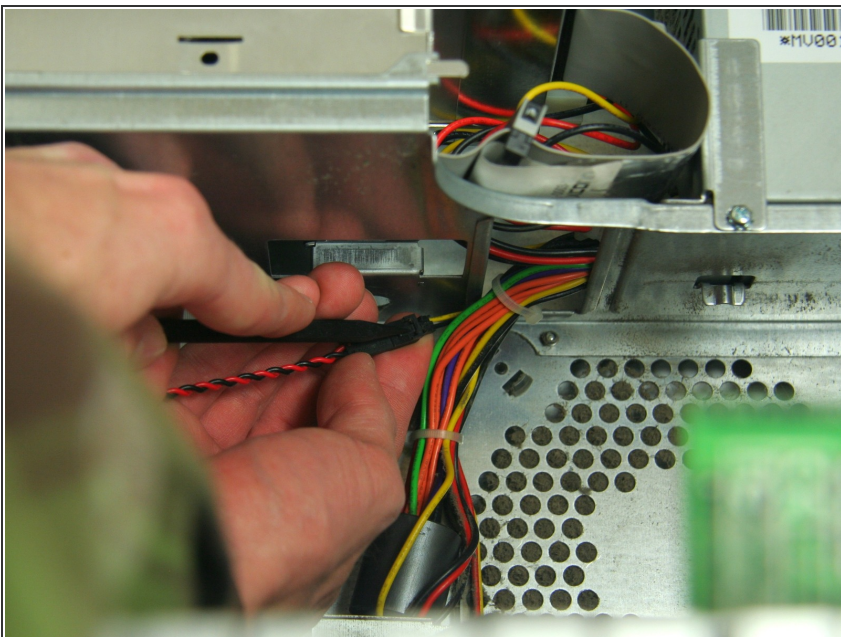

- Remove the power cable from the fan and detach bracing.

This document was last generated on 2017-06-22 02:24:18 AM.